

Сберегай боевую технику — Она не подведёт тебя в бою.

11 - SPARE PARTS

All the spare parts indicated in Fig. 3, 4 that is:

- A: Pushbutton
- B: Calibration knob
- C: Shaft
- D: Ejector
- F: Shaft nut
- G: Piston assembly
- H: Spacer
- I: O-ring
- J: Seal
- K: Calibration key
- L: Filter
- M: Ejector cap
- N: Ejector pushbutton

can be ordered from your HTL representative (type of pipette and name of the part for this pipette should be specified).

Warning: The replacement of the piston requires conducting of calibration procedure according to section 8.

